



Installation for truck and bus chain.

Nøsted Kjetting a.s

Lay the chain over the wheel with the boomer on the outside. The cams, if any, must be open. Pull outside boomer and inside fastener so far in under the wheel as possible. Move the vehicle about 1/4 wheel length. Connect ininside fastener in a sidechain link as tight as possible. Guide outside boomer through a side chain link and tighten. Retighten the chain later by leading the boomer through next side chain link. If side chain is equipped with optional cams, turn cams for easy tightening.

If brekage in chain occur, this can be fixed by enclosed repair link. Rubber button is easiest to fit by pressing with a hard object. Brekage must be repaired immediately. Repairing link can also be used as substitute for damaged hook.

Repair of brekage in studded link



Warning! This chain is strictly to be used as tire chain only. Keep properly installed at all times. Brekage must be repaired. Failure may cause damage to equipment or injury and death to individuals